

Partner Processor Beep Test

Access any c.o. line on the Partner system and dial Feature #1. You will hear a series of beep tones. Use the following chart to identify your Partner processor.

| <u>Beeps</u> | <u>System</u> |
|---------------------|----------------------|
| 1 | Basic R1 |
| 3 | Basic R2 |
| 1/3 | Basic R3.1 |
| 2/3 | Basic R4 |
| 4/1 | Basic R4.1 |
| 2 | Partner Plus R1 |
| 4 | Partner Plus R2 |
| 2/4 | Partner Plus R3 |
| 1/2 | Partner Plus R3.1 |
| 3/2 | Partner Plus R4 |
| 4/2 | Partner Plus R4.1 |
| 2/2/1 | Partner II R1 |
| 2/2 | Partner II R2 |
| 3/1 | Partner II R3 |
| 1/4 | Partner II R3.1 |
| 3/3 | Partner II R4 |
| 3/4 | Partner II R4.0.1 |
| 4/3 | Partner II R4.1 |
| 5/1 | ACS R1 |
| 5/2 | ACS R2 |
| 5/3 | ACS R3 |
| 5/4 | ACS R4 |
| 5/5 | ACS R5 |
| 5/6 | ACS R6 |