

Quick Reference Guide For Spirit 308/616 – System Customization

Administration – Set the **Admin** switch on the Spirit controller to **ON**. At extension 10 (6-button or 24-button phone) press **INTERCOM**, press **SPEAKER**, dial *0. Install the administration overlay. All of the following procedures are done while in **Administration**. The numbers in parentheses after the program heading are the factory default values. Light patterns indicate current settings: 1=Off, 2=On, 3=Slow flash, 4=Wink

System Customization – Dial 1, customize a feature below

Automatic Privacy (2)

Press **FEATURE**

Dial 1

1=Off, 2=On

Toll Call Check (1)

Press **FEATURE**

Dial 2

1 = 1 required, 2 = 1 not required

Held Call Reminder (1)

Press **FEATURE**

Dial 3

0=No reminder, 1=1 min, 2=2 mins,

3=3 mins, 4=4 mins

Line Type (2)

Press **FEATURE**

Dial 4

Press line button(s)

1=Unavailable line, 2=Outside line,

3=PBX/Centrex line

PBX Line Access Codes (9)

Press **FEATURE**

Dial 5

Add code – Dial code (0-9), press **ADD**

Delete code – Dial code (0-9), press **DROP**

Erase all codes – Press **DROP**, dial *

External Alert (2)

Press **FEATURE**

Dial 6

Press line button(s)

1=Never, 2=Night only, 3=Day only,

4=Always

Dial Type (2)

Press **FEATURE**

Dial 7

Press line button(s)

1=Touchtone, 2=Dial pulse

Quick Reference Guide For Spirit 308/616 – Telephone Customization

Administration – Set the **Admin** switch on the Spirit controller to **ON**. At extension 10 (6-button or 24-button phone) press **INTERCOM**, press **SPEAKER**, dial *0. Install the administration overlay. All of the following procedures are done while in **Administration**. The numbers in parentheses after the program heading are the factory default values. Light patterns indicate current settings: 1=Off, 2=On, 3=Slow flash, 4=Wink

Telephone Customization – Dial 2, press **STATION**, dial extension (10-25)

Line Use Permission (2)

Press **FEATURE**

Dial 1

Press line button(s)

1=No permission, 2=Full permission,
3=Answer only

Line Ringing Options (2)

Press **FEATURE**

Dial 3

Press line button(s)

1=No ring, 2=Normal, 3=Abbreviated,
4=Delayed

Outside Service (2)

Press **FEATURE**

Dial 5

1=Outward restricted, 2=Unrestricted,
3=Toll restricted

Copy To Telephone

Press **COPY TO**

Dial extension (10-25)

Automatic Line Selection (2)

Press **FEATURE**

Dial 2

Press line button(s)

1=Not eligible, 2=Eligible

Night Ringing (2)

Press **FEATURE**

Dial 4

1=Normal ring, 2=Programmed ring

Copy To All

Press **COPY TO**

Press * (All telephones must be idle)

Quick Reference Guide For Spirit 308/616 – Miscellaneous System

Administration – Set the **Admin** switch on the Spirit controller to **ON**. At extension 10 (6-button or 24-button phone) press **INTERCOM**, press **SPEAKER**, dial *0. Install the administration overlay. All of the following procedures are done while in **Administration**.

System Speed Dial – Dial 3

Dial telephone number (16 digits max, including pauses and one flash)

Press **MEMORY**

Dial 2-digit code (30-79 = Unrestricted, 80-99 = Restricted)

Repeat for each number to be stored

(Pause = press **HOLD**, Flash = press **DROP**)

System Reset

Dial 009009

System is returned to factory default

Quick Reference Guide For Spirit 308/616 – Telephone Features

Personal Speed Dial – Storing At 6-Button Telephone

Press **INTERCOM**

Press **SPEAKER**

Dial *0

Dial phone number (16 digits max. including pauses and one flash)

Press **MEMORY**

Dial 2-digit code (10-25)

(Pause = Press **HOLD**, Flash = Press **DROP**)

Personal Speed Dial – Storing At 24-Button Telephone

Press **INTERCOM**

Press **SPEAKER**

Dial *0

Dial phone number (16 digits max. including pauses and one flash)

Press auto-dial button (10-25)

(Pause = Press **HOLD**, Flash = Press **DROP**)

Intercom Dial Codes

Do Not Disturb on = *2

Do Not Disturb off = #2

Night Service on = *4

Night Service off = #4

Send Message = *6

Cancel Message = #6

Pickup Ringing Call = *8 + extension (10-25)

Loudspeaker Paging = 60

Internal Page All = 61

Features

Personal Speed Dial (6-button) = Press **MEMORY**, dial 2-digit code (10-25)

Personal Speed Dial (24-button) = Press auto-dial button (10-25)

System Speed Dial = Press **MEMORY**, dial 2-digit code (30-99)

Last Number Redial = Press **MEMORY**, dial 0

Line Reserve = Press busy line button. Phone will signal when line is free.

Privacy Release = Hold down line button as other party presses line button to join call

Flash = Press **RECALL/DROP**

J & J Communications

770-795-5462 or 888-552-6665

www.jandjcommunications.com