

## **NAM Setup for Voicemail Manager**

Install a 14.4K internal modem in an available ISA slot. Set the modem to com port 4, IRQ 5.

Setup a Windows dialup networking session for the modem.

User name = namaccess

Password = log2nam

Setup Norstar Voicemail Manager.

IP address = 192.168.110.10

Password = NAM admin login, i.e. 1020000

Connect to the modem first. Then start Norstar Voicemail Manager.

**J & J Communications**

**770-795-5462 or 888-552-6665**

**[www.jandjcommunications.com](http://www.jandjcommunications.com)**